

QUICK START GUIDE

T955WH QUICK START GUIDE



Please refer to the Installation Manual for more information.

For your installation ease, the communication link between this T955WH and the Base Module has already been established.

Follow the steps below for a quick install.

- 1 Wire the base module to the system control board exactly like you would wire a hardwired thermostat.

Note: The base module must be 24V powered.


- 2 Install the T955WH thermostat.

Note: The T955WH can be battery only powered if remote sensors are NOT used. If a remote sensor is used, the T955WH must be hardwired. This can be easily done by installing the T955WH where the old thermostat was and then use two of the existing wires for R and C.

- 3 Configure Technician Setup on the T955WH for your particular application.

- 4 Install and connect any accessories if needed.

The T955WH can use the outdoor temperature sensor (R250W) or indoor temperature sensor (R251W).

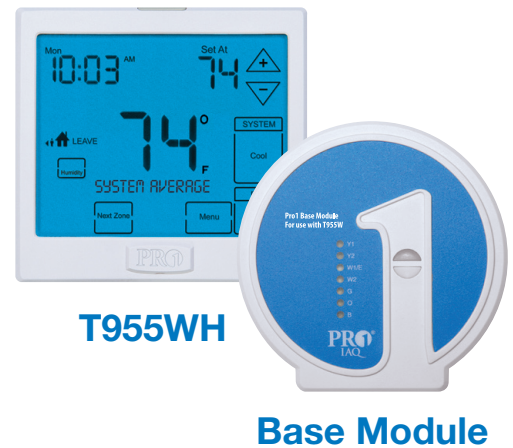

T955WH

Base Module

Accessories



R250W
Outdoor Sensor

R251W
Indoor Sensor

Pro1 IAQ Inc.

Toll-free: 1-888-Pro1iaq (776-1427)

Toll Number (Outside the USA): 330-821-3600

Web: <http://www.pro1iaq.com>

Hours of Operation: Monday - Friday 9 AM - 6 PM Eastern